

# NP-4

## REMOVING NEEDLE:

1. Gently grab the sides of the needle and pull away from the tone arm.



## INSTALLING NEEDLE:

After following "Removal Instructions" above, follow steps 1 through 3 below.

1. Position needle with diamond stylus facing down.
2. Line the needle up with the tone arm.
3. Slide needle onto the tone arm.



## ADDITIONAL INFORMATION:

- Take note that the replacement needle you are receiving is the same as the needle already on the tonearm.
- This needle is used with 33 1/3, 45 & 78 speed records.
- When to replace the needle depends on how often you use your turntable.
- This needle will provide an average of 1000 hours playing time.
- To order additional needles, please contact your retailer/cataloger or Crosley Radio at 1-866-CROSLEY.



1220 East Oak Street • Louisville, Kentucky 40204

1-866-CROSLEY

McGalls.com  
WWW.CROSLEYRADIO.COM